

Lijadora SR 358

No. Diagrama	Código	No. Referencia Metabo	Descripción
4	2000316025200	316025200	MANGO COMPLETO
11	2000141153400	141153400	ARANDELA
14	2000330001120	330001120	VENTILADOR
20	2000141162570	141162570	PASADOR CILÍNDRICO
21	2000343371450	343371450	PALANCA
23	2000316025950	316025950	BRIDA
24	2000343371440	343371440	PALANCA
25	2000316026300	316026300	SOPORTE RECOGIDA POLVO
26	2000339111090	339111090	ARANDELA
27	2000344100960	344100960	SACO DE PAPEL
28	2000343371220	343371220	CARACA DE MOTOR
30	2000344492110	344492110	CORDÓN COMPLETO
31	2000339040660	339040660	MANGUERA AISLANTE
32	2000343408920	343408920	INTERRUPTOR NEGRO
33	2000339127870	339127870	ESTRIBO TENSOR
36	2000316025750	316025750	VENTILADOR
37	2000141116970	141116970	TORNILLO ALOMADO
38	2000343371260	343371260	TAPA DE ASPIRACIÓN
39	2000342020930	342020930	RESORTE DE TORSIÓN
41	2000316026740	316026740	PALANCA
43	2000315414290	315414290	PLACA OSCILANTE
45	2000339070070	339070070	ARANDELA DE CUBIERTA
46	2000143111450	143111450	RODAMIENTO RADIAL
47	2000315414380	315414380	CONTRAPESO
48	2000339000090	339000090	ARANDELA
50	2000339160430	339160430	TAPA
51	2000339160250	339160250	BASE PARA LIJA
52	2000344100640	344100640	PROTECCIÓN DEL CABLE

